

Changing your filters

- 1) Turn off cold water under sink
- 2) Turn off holding tank, (knob at top of tank)
- 3) Turn cold water on at sink its self.
- 4) Turn on RO spigot.
- 5) Remove filters and replace with new ones.
- 6) Turn on cold water under the sink.
- 7) Turn on the holding tank.
- 8) Let the water run for a couple of min., until it clears.
- 9) Check for leaks from the filter. Lay paper towels down and check at 6, 12, and 24 hours for drips.